


# TX-E251 Long-Range Extended Battery Life DWS

**PLEASE SEE REVERSE SIDE FOR IMPORTANT PRODUCT WARNINGS AND DISCLAIMER INFORMATION.**

**Description**

The TX-E251 Long-Range Extended Battery Life DWS is a sensor intended for installation on doors, windows, and other objects that open and close, and use with Interlogix and Qolsys control panels that receive 319.5 MHz RF protocol. The sensor transmits signals to the control panel when a magnet mounted near the sensor is moved away from or closer to the sensor. The TX-E251 features a high capacity CR2 lithium battery for extended battery life, and maximum performance output power for long range applications. The sensor features two separate zones: zone 1 can be used for either of the two reed switches, and zone 2 can be used as an external contact option. The sensor is also equipped with a cover tamper switch for additional security.

**Figure 1: TX-E251**

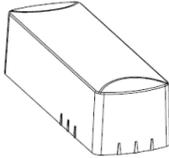

**Reed Switch Enrolling**

To enroll the TX-E251 into the panel for utilization of the transmitter's reed-switches, follow these steps:

- 1) Place the panel into program mode, then go to Learn Sensors menu. Refer to your specific alarm panel manual for details on these menus.
- 2) Remove the battery pull tab to auto-enroll. Then select the appropriate sensor group and number.
- 3) If the panel does not respond upon removing the battery pull tab, disengage the case cover from the back housing by sliding, then remove and replace the battery until the panel responds.

**External Contact Enrolling**

To enroll the TX-E251 into the panel for utilization of the transmitter's external contact, follow these steps:

- 1) Remove the battery OR make sure the pull tab is still in place between the positive battery terminal and the battery contact.
- 2) Connect the external contact in the restored state (4.7K for normally closed, or open circuit for normally open).
- 3) Install the battery OR remove the pull tab, and install and lock the top cover on to the sensor.
- 4) Place the panel into program mode, then go to Learn Sensors menu. Refer to your specific alarm panel manual for details on these menus.
- 5) To auto-enroll the external contact into the panel, change the state of the external contact to the faulted state (open circuit for normally closed contact or 4.7K for a normally open contact).
- 6) If the panel does not respond, then repeat steps 1 through 5.

**External Contact Wiring**

Use the following specifications for the external contact:

- Maximum wire length: 26 ft. (8 m).
- Wire: Stranded, 22-gauge (0.7112 mm).
- Switches: Hermetically sealed external switches (sealed reed switches) that supply a minimum 250 ms open or close on alarm.

**Note:** Do not connect more than five external contacts to a door/window sensor.

**Caution:** You must install the provided EOL resistor at the external detection device for proper supervision.

**ATTENTION:** Il faut installer la resistance de fin de ligne fourni sur la peripherique de detection externe pour la supervision.

You can wire the sensor terminal blocks with leads from an external contact (Figure 2). The door/window sensor provides alarm and tamper indication. Wire the external contact with one end-of-line (EOL) resistor in series with the external contact.

This gives the following readings for each configuration:


**Normally closed:**

- Zero ohm/short = Tamper
- 4.7K ohm = Normal
- Open = Alarm

**Normally open:**

- Zero ohm/short = Tamper
- 4.7 ohm = Alarm
- Open = Normal
- 

**Figure 2: External Contact Wiring**

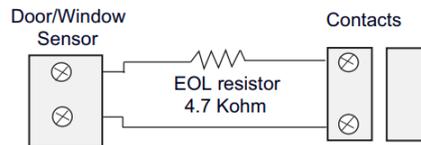

**Mounting**

Included with this device is double sided tape for the transmitter and magnet, as well as screws if a more secure method of mounting is preferred. Choose a suitable location for the sensor by following the procedure in the section "Testing the Sensor" ensuring desired signal strength is achieved. Note that it is recommended the transmitter be installed on the stationary or non-moving part of the installation (frame) and the magnet installed on the moving object (door). Where possible, install sensors within 100 ft. (30 m) of the panel. While a transmitter may have an open-air range of 500 ft. (150 m) or more, the environment at the installation site may have a significant effect on operational range. Changing a sensor location may improve wireless communication.

For reliable bonding with the provided double sided tape, ensure the surface is clean and dry. Apply the tape to the backside of the sensor, and then to the desired location. Apply firm pressure for several seconds. When mounting with double sided tape, ensure temperatures are above 50°F and will remain above 50°F for at least 24 hours to ensure proper bond. After 24 hours, the bond will hold at lower temperatures.

## Sensor Testing

The sensor test verifies proper communication between the sensor and the panel/receiver. The sensor should be tested prior to permanent installation, as well as weekly. To test the sensor, refer to the specific panel/receiver documentation and do the following:

- 1) Put the panel/receiver into sensor test mode
- 2) Open the door/window the sensor is installed on – the sensor will then transmit a signal
- 3) Listen for the siren beeps to determine the appropriate response
- 4) Exit sensor test mode when proper communication between the sensor and panel/receiver has been verified

## Replacing the Battery

The TX-E251 comes pre-installed with a single GPI CR2 Lithium battery that provides 10 years of battery life under normal usage conditions. When the battery is low, a signal will be sent to the control panel. To replace the battery, do the following:

- 1) With the sensor mounted, slide the case cover up or down (depending on the orientation of the sensor) to unlock the case cover from the base. Pull the case cover away from the sensor to reveal the battery.
- 2) Remove the existing battery and re-install a new Panasonic CR2 battery. When inserting the battery, pay close attention to the battery polarity indicators to ensure proper placement of the battery (positive end of battery should be facing towards the circuit board and antenna).
- 3) Replace the case cover and slide to lock. An audible click should be heard when the cover engages in the locked position correctly.

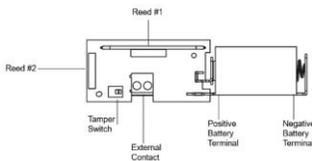


Figure 3: Circuit Board Layout

## TX-E251 Specifications

RF Frequency	319.5 MHz – (Crystal Based)
Compatibility	Interlogix 319.5 MHz control panels/receivers
Battery Type	CR2 (GPI)
Typical Battery Life	Up to 10 years at 68° F (20° C)
Operating Temperature Range	32° to 120°F (0° to 49°C)
Relative Humidity	0-85% non-condensing
Supervisory Interval	64 Minutes
Storage Temperature Range	-30 to 140°F (-34 to 60°C)
Regulatory	Conforms to ANSI / UL Std 634 Certified to ULC Sub C634
Dimensions	3.25" x 1.13" x 0.88"

## FCC Compliance Statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by Ecolink could void the user's authority to operate the equipment.

This device complies with Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Cet appareil est conforme avec Industrie Canada exempts de licence standard RSS (s). Son fonctionnement est soumis aux deux conditions suivantes: (1) cet appareil ne doit pas provoquer d'interférences et (2) cet appareil doit accepter toute interférence, y compris celles pouvant causer un mauvais fonctionnement de l'appareil.

In accordance with FCC requirements of human exposure to radiofrequency fields, the radiating element shall be installed such that a minimum separation distance of 20 cm is maintained from the general population.

Conformément aux exigences d'Industrie Canada en matière d'exposition humaine aux champs de radiofréquences, l'élément rayonnant doit être installé de telle sorte qu'une distance minimale de 20 cm soit maintenue par rapport à la population générale.

FCC ID: XQC-TXE251  
IC: 9863B-TXE251

This Class B digital apparatus complies with Canadian ICES-3B.  
Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

## Contact information

For sales support, visit [www.discoverecolink.com](http://www.discoverecolink.com) or email [sales@discoverecolink.com](mailto:sales@discoverecolink.com)

To provide feedback or to speak to Ecolink customer care directly, email [sales@discoverecolink.com](mailto:sales@discoverecolink.com) or call 855-632-6546 option 3 then option 1 for sales.

For a technical support representative call 855-632-6546 Option 2 for security product support. Option 1 for ZWAVE or Zigbee product support. Hours of operation are Monday – Friday 8a to 8p eastern standard time.

## Product Warnings and Disclaimers



**WARNING: CHOKING HAZARD - Small parts. Keep away from children.**

**ATTENTION: RISQUE D'ÉTOUFFEMENT – Petite pice. Garder éloigner des enfants.**

### Limitation of Liability

A PROPERLY INSTALLED AND MAINTAINED ALARM/SECURITY SYSTEM MAY ONLY REDUCE THE RISK OF EVENTS SUCH AS BREAK-INS, BURGLARY, ROBBERY OR FIRE. IT IS NOT INSURANCE OR A GUARANTEE THAT SUCH EVENTS WILL NOT OCCUR. THAT ADEQUATE WARNING OR PROTECTION WILL BE PROVIDED, OR THAT THERE WILL BE NO DEATH, PERSONAL INJURY, AND/OR PROPERTY DAMAGE AS A RESULT.

WHILE ECOLINK UNDERTAKES TO REDUCE THE PROBABILITY THAT A THIRD PARTY MAY HACK, COMPROMISE OR CIRCUMVENT ITS SECURITY PRODUCTS OR RELATED SOFTWARE, ANY SECURITY PRODUCT OR SOFTWARE MANUFACTURED, SOLD OR LICENSED BY ECOLINK, MAY STILL BE HACKED, COMPROMISED AND/OR CIRCUMVENTED. ECOLINK DOES NOT ENCRYPT COMMUNICATIONS BETWEEN ITS ALARM OR SECURITY PANELS AND THEIR OUTPUTS/INPUTS INCLUDING, BUT NOT LIMITED TO, SENSORS OR DETECTORS UNLESS REQUIRED BY APPLICABLE LAW. AS A RESULT THESE COMMUNICATIONS MAY BE INTERCEPTED AND COULD BE USED TO CIRCUMVENT YOUR ALARM/SECURITY SYSTEM.

### Warranty Disclaimers

ECOLINK HEREBY DISCLAIMS ALL WARRANTIES AND REPRESENTATIONS, WHETHER EXPRESS, IMPLIED, STATUTORY OR OTHERWISE INCLUDING (BUT NOT LIMITED TO) ANY WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE WITH RESPECT TO ITS SECURITY PRODUCTS AND RELATED SOFTWARE. ECOLINK FURTHER DISCLAIMS ANY OTHER IMPLIED WARRANTY UNDER THE UNIFORM COMPUTER INFORMATION TRANSACTIONS ACT OR SIMILAR LAW AS ENACTED BY ANY STATE. (USA ONLY) SOME STATES DO NOT ALLOW THE EXCLUSION OF IMPLIED WARRANTIES, SO THE ABOVE EXCLUSION MAY NOT APPLY TO YOU. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS AND YOU MAY ALSO HAVE OTHER LEGAL RIGHTS THAT VARY FROM STATE TO STATE. ECOLINK MAKES NO REPRESENTATION, WARRANTY, COVENANT OR PROMISE THAT ITS SECURITY PRODUCTS AND/OR RELATED SOFTWARE

(I) WILL NOT BE HACKED, COMPROMISED AND/OR CIRCUMVENTED; (II) WILL PREVENT, OR PROVIDE ADEQUATE WARNING OR PROTECTION FROM, BREAK-INS, BURGLARY, ROBBERY, FIRE; OR (III) WILL WORK PROPERLY IN ALL ENVIRONMENTS AND APPLICATIONS.

### Disclaimer

THE INFORMATION IN THIS DOCUMENT IS SUBJECT TO CHANGE WITHOUT NOTICE. ECOLINK ASSUMES NO RESPONSIBILITY FOR INACCURACIES OR OMISSIONS AND SPECIFICALLY DISCLAIMS ANY LIABILITIES, LOSSES, OR RISKS, PERSONAL OR OTHERWISE, INCURRED AS A CONSEQUENCE, DIRECTLY OR INDIRECTLY, OF THE USE OR APPLICATION OF ANY OF THE CONTENTS OF THIS DOCUMENT. FOR THE LATEST DOCUMENTATION, CONTACT YOUR LOCAL SUPPLIER OR VISIT US ONLINE AT [WWW.DISCOVERECOLINK.COM](http://WWW.DISCOVERECOLINK.COM)

THIS PUBLICATION MAY CONTAIN EXAMPLES OF SCREEN CAPTURES AND REPORTS USED IN DAILY OPERATIONS. EXAMPLES MAY INCLUDE FICTITIOUS NAMES OF INDIVIDUALS AND COMPANIES. ANY SIMILARITY TO NAMES AND ADDRESSES OF ACTUAL BUSINESSES OR PERSONS IS ENTIRELY COINCIDENTAL.

### Intended Use

USE THIS PRODUCT ONLY FOR THE PURPOSE IT WAS DESIGNED FOR; REFER TO THE DATA SHEET AND USER DOCUMENTATION. FOR THE LATEST PRODUCT INFORMATION, CONTACT YOUR LOCAL SUPPLIER OR VISIT US ONLINE AT [WWW.DISCOVERECOLINK.COM](http://WWW.DISCOVERECOLINK.COM) THE SYSTEM SHOULD BE CHECKED BY A QUALIFIED TECHNICIAN AT LEAST EVERY 3 YEARS AND THE BACKUP BATTERY REPLACED AS REQUIRED.

### Limited Warranty

This limited warranty is provided by Ecolink Intelligent Technology ("Ecolink") to you as the original purchaser of the product. Ecolink warrants this product to be free from defects in material and workmanship for a period of one (1) year from the date of original purchase. The determination of whether the product is defective shall be made by Ecolink in its sole discretion with consideration given to the overall performance of the product. If Ecolink determines that any product is defective, Ecolink's sole obligation and your sole and exclusive remedy shall be that Ecolink will replace the product.

This warranty does not apply to damage caused by shipping or handling, or damage caused by accident, abuse, misuse, misapplication, ordinary wear, improper maintenance, failure to follow instructions or as a result of any unauthorized modifications. The foregoing limited warranty is and shall be in lieu of any and all other warranties, whether expressed or implied and of all other obligations or liabilities on the part of Ecolink. Ecolink neither assumes responsibility for, nor authorizes any other person purporting to act on its behalf to modify or to change this warranty, nor to assume for it any other warranty or liability concerning this product. It is recommended that the customer check their equipment on a regular basis for proper operation.

### Return Policy

Please visit us at [www.discoverecolink.com/return](http://www.discoverecolink.com/return) to view our return policy.